


Refer to [EC-101](#) for Special Ditch Control (Wood Excelsior Mat).

- ① Install anchor slot at the beginning (upstream end) of all mat installations.
- ② Place staples alternately in rows approximately 24 inches apart. Approximately 30 staples required per square (100 sq. ft.) of each type of mat.
- ③ Stagger Junction Slots.

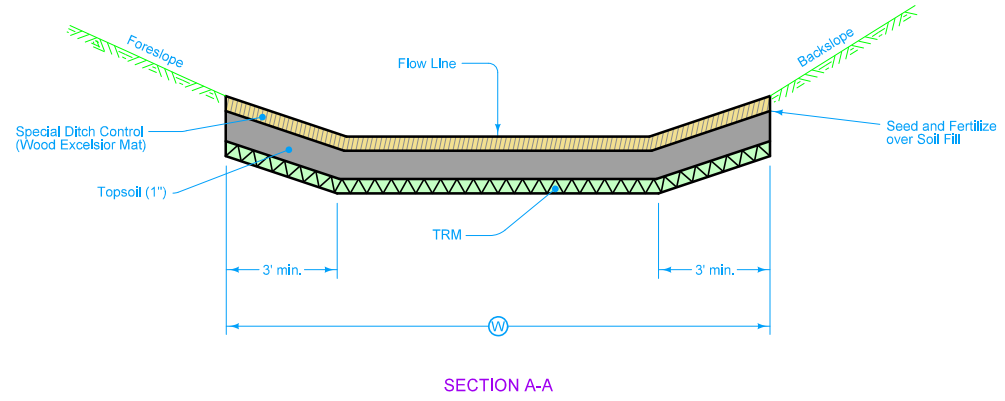

TRM
 Wood Excelsior Mat

Possible Contract Items:
 Turf Reinforcement Mat

Possible Tabulation:
 100-22

 STANDARD ROAD PLAN	REVISION
	2 04-19-16
	EC-104
SHEET 1 of 1	
REVISIONS: Revised to show placement of erosion control beginning at the end of the apron. Changed color in PLAN views to match wood excelsior mat.	
 APPROVED BY DESIGN METHODS ENGINEER	
TURF REINFORCEMENT MAT (TRM)	